




Swapping a Card & Using the Metal Rod



1. Assemble the Card Extractor

The extractor in your possession consists of **two parts**; **unscrew** the metal tip from the handle, **flip the tip** so that the sharp part faces outward, and screw it back into its place.

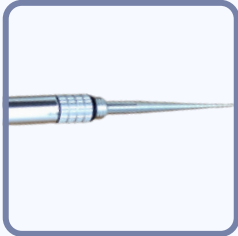

3



2



1

2. Removing the Card

1. Locate the small gap at any corner of the card frame.

Gently insert the tool's point into this gap. You may need to wiggle it slightly to get it underneath the card.

2. Important: **Never use force!**




If the tool doesn't slide in easily, simply **try a different corner.**

3. Once the tip is under the card, **gently run the tool along the edge** to pop the card out.



3

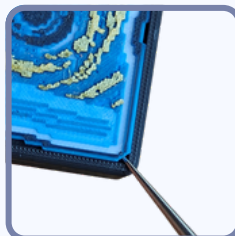

2



1

3. Using the Metal Rod

The fidget features **three notches** and a side groove for rod storage; using the metal rod transforms the device **into a switch**, unlocking additional play modes.

